




## PoE Injector Series Quick Installation Guide

### Package Content

- PoE Injector x 1
- AC Power Cord x 1
- QIG x 1

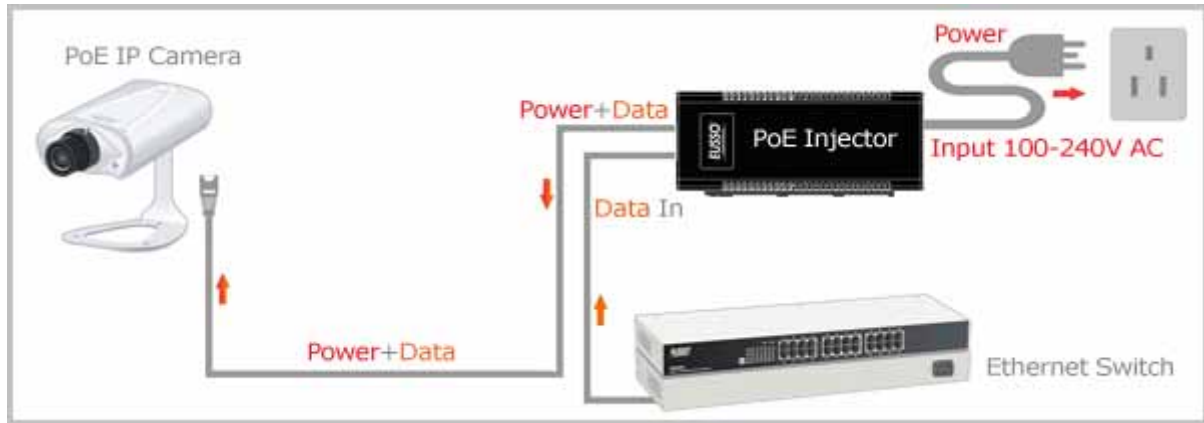

\* If working with PoE-embedded IP Cam, the cat5/e cable of Injector is directly connecting to the LAN port of PoE IP cam as below figure

### Installation Steps

1. Connect AC Power cord to PoE injector, and "Power" LED will be on.
2. Connect Data/in port of Injector to LAN switch via Ethernet cable, and set the correct voltage (5V or 9V or 12V) (default 5V) via volt selector on the side of PoE splitter.
3. Connect "Power+Data" port on splitter and "P+D/out" port on Injector with Ethernet cable, make sure "Power" LED of splitter is on.
4. Connect "Power OUT" cable on Splitter to power jack of the network device and connect "Data OUT" cable on Splitter to RJ45 port of network device.
5. Check whether the network device is on. If not, please make sure that power is on for Injector and Splitter, and all cables are connected correctly.
6. During setup, the terminal unit can be set to power up any compatible 5V/9V/12V Ethernet-enabled device via the volt selector located on the side.

