

Quick Installation Guide for Broadband Router

(The specification is subject to change without notice.)

A. Hardware Installation

1. **Setup LAN connection:** connect an Ethernet cable from your computer's



Ethernet port to one of the LAN ports of this product.

Note:

The pictures shown here refer to the Broadband Router.

2. **Setup WAN connection with your router:** connect the network cable from your cable (DSL) modem to the WAN port of this product.

B. Mark the correct TCP/IP settings for your PC:

1. Install the TCP/IP protocol for your PC if it has not yet been installed. (Please refer to User's Manual)
2. From the Windows **Start** button on your PC, choose **settings**, and select the **Control Panel** item.
3. Double click the **Network** icon. Select the TCP/IP line that has been associated to your network card in the **Configuration** tab of the Network window.



4. Click on the **Properties** button. Click the **IP Address** tab. Select **Obtain an IP address automatically**.



- Click the **Gateway** tab. Clear all of the gateway settings. Click on the **OK** button.

Note: If you want to set the IP of your PC manually, please refer to the User Manual.



C. Configuring Broadband Router with a Web Browser

- Activate your browser and **disable the proxy** or **add the IP address of this product into the exception**. Then type this product's IP address (for example: <http://192.168.123.254>) in the Location (for Netscape Communicator) or Address (for Internet Explorer) field and press **Enter**.
- Key in the system password (the factory default is "**admin**") in the **System Password** field and click on the **Log in** button.
- Press the **Primary Setup** button and the following screen will be shown.

Multi-Functional Wireless Broadband NAT Router (R1.94MvTIG)

Administrator's Main Menu

- Status
- Wizard
- + Basic Setting
- + Forwarding Rules
- + Security Setting
- + Advanced Setting
- + Toolbox

Log out

System Status

Item	WAN Status	Sidenote
Remaining Lease Time	00:00:00	Renew
IP Address	0.0.0.0	
Subnet Mask	0.0.0.0	
Gateway	0.0.0.0	
Domain Name Server	0.0.0.0	

Item	Peripheral Status	Sidenote
Printer	Not ready	

Statistics of WAN	Inbound	Outbound
Octects	0	0
Unicast Packets	0	0
Non-unicast Packets	0	0

[View Log...](#) [Clients List...](#) [Help](#) [Refresh](#)

Device Time: Wed Oct 01 00:32:25 2003

- Press the **Change...** button, select the WAN type you use and then press the **Save** button.
- Key in the proper values for the settings items shown on the page. For the meaning of the items, please refer to the on-line help or User Manual.
- After all of the items are set, press the **Save** button and reboot this product.