

# VoIP Configuration & Operation Settings

## ***Start-Up***

# Start-Up

**Required Environment**

**Interface Connection**

**Access into ITG**

**Fix IP Settings**

**Dial Plan Settings**

## Required Environment


### *Networking:*

- a. A Real IP with Min. 64K bandwidth(4 port)
- b. Connect to ISP with ADSL or CableModem
- c. A RJ-45 connector with Cat.5 LAN cable

### *Telecom:*

- a. FXO need an analog telephone line from PSTN or PBX
- b. FXS need an analog telephone line to a phone set or FAX
- c. PSTN or PBX should provide cp\_tone(e.g. disconnect tone)

# Interface Connection

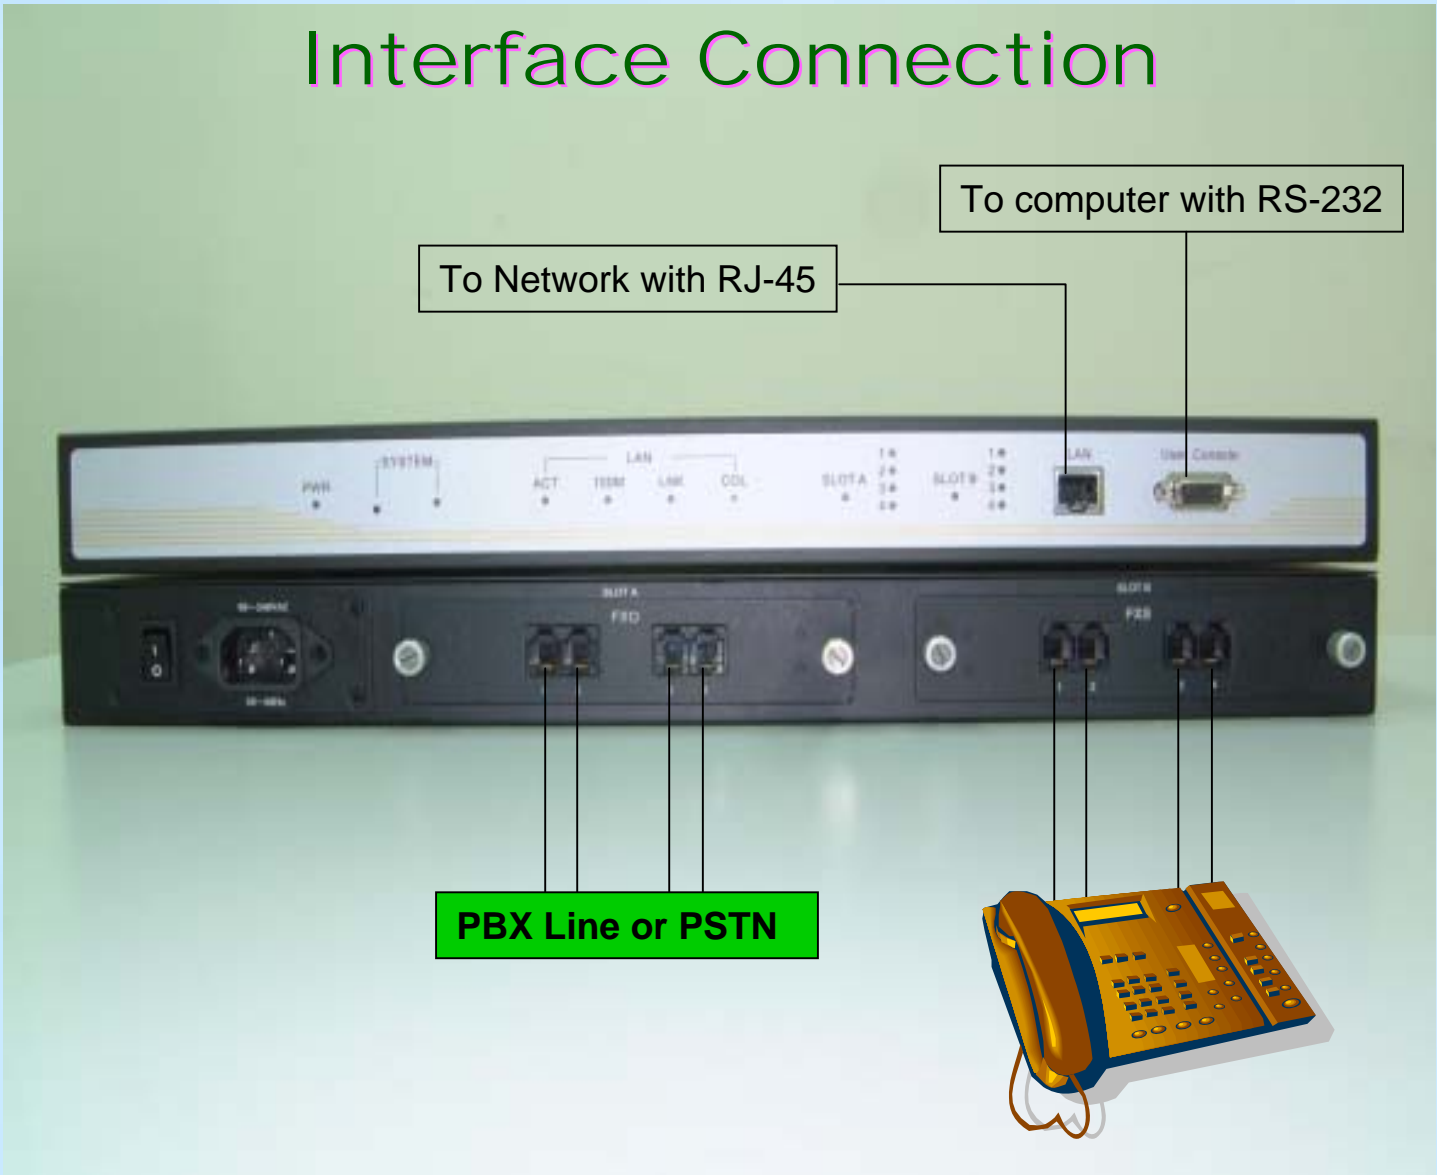

## Access into ITG

### GUI:

- a. Connect your ITG and computer to LAN
- b. Open your computer Web Browser
- c. Key-in your ITG current IP address
- d. Key-in 'eitg' in log-in name field
- e. Key-in '123' in password field

### Console:

- a. Connect your ITG and computer with RS-232
- b. Run your terminal software (e.g. Hyper terminal)
- c. Set the connection configuration (19200,N,8,1)

## Access into ITG(Cont'd)

### Telnet:

- a. **Connect your ITG and computer to WAN**
- b. **Switch your computer to DOS mode**
- c. **Key-in Telnet (ITG IP address)**
- d. **Key-in 'eitg' in login: field**
- e. **Key-in '123' in password field**

## Fix IP Setting

### **IP address:**

- a. Access into ITG
- b. Under the 'Console>' prompt
- c. Key-in 'net set ip (ip address)'
- d. Re-start the ITG to activate the settings

### **MASK :**

- a. Access into ITG
- b. Under the 'Console>' prompt
- c. Key-in 'net set mask (ip sub-mask)'
- d. Re-start the ITG to activate the settings

## Fix IP Setting(Cont'd)

### **IP Gateway:**

- a. Access into ITG**
- b. Under the 'Console>' prompt**
- c. Key-in 'net set gateway (ip gateway address)'**
- d. Re-start the ITG to activate the settings**



# Q & A